


# Manual

Model: WC 350

# Fan Speed Wall Control Installation and Operation Instructions


(Suitable for any AC220V-240V/50Hz supply ceiling fan, 150 watts max. loading)

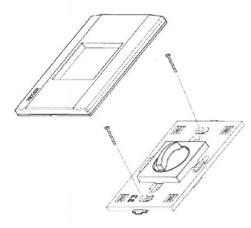

# Step 1 – Wiring & Installation Instructions

(Turn off the main power supply in the circuit breaker box, before commencing the installations.)

- 1. Make wires connection according to the wiring instruction in the rear page.
- 2. Remove the wall control front plate using a flat end small screwdriver.
- 3. Mount the wall control unit onto wall outlet box with the provided two screws firmly. (Can be installed vertically or horizontally.)
- 4. Replace the front plate.
- 5. Restore the power supply; the wall control is now ready for operation.

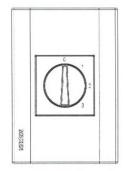

# Step 2 - Fan Speed Regulating Instructions


- 1. Set the pull chain switch to the "High Speed" position, if your decorative ceiling fan has provided this kind of speed regulating switch.
- 2. You can now turn the knob clockwise to regulate the fan speeds (in sequence).
  - 0 -- Fan Off
  - 1 High Speed
  - 2 Medium Speed
  - 3 Low Speed

#### **CAUTION:**

This is NOT a 360-degree rotate switch, must turn counterclockwise 3 - 2 - 1- 0 to switch the fan off.

### CEILING FAN ( WITHOUT LIGHT ) WALL CONTROL WIRING INSTRUCTION

## CEILING FAN ( WITH LIGHT ) WALL CONTROL WIRING INSTRUCTION

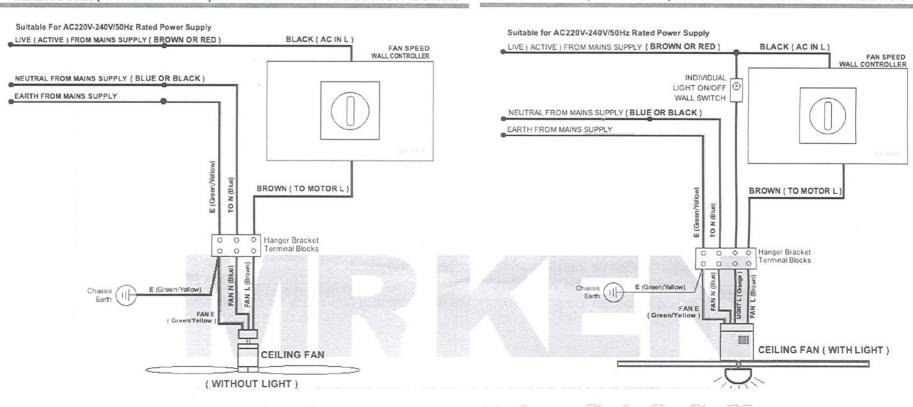

### **CAUTION:**

- 1. To avoid possible short circuit or electrical shock, turn off the main power supply in the circuit breaker box, before proceeding with the wiring steps.
- 2. Make sure the wiring connection is done correctly in accordance with the wiring instruction diagrams. If the colors of fan wires or power supply loops are different from the wiring instructions or there is any doubt, have this unit installed by a qualified electrician.
- 3. To avoid possible electric leakage, ensure that all wires are tightly secured and isolated and completely stuck in the outlet box and not being pinched between the metal plate and the wall, no bare wire is visible at the wire connectors, except for the earth wire.
- 4. Do not restore the main power supply and operate wall control until the ceiling fan and fan blades are completely installed in place.
- 5. The step of earth connection must be done thoroughly and securely.



Model: WC 350

Dimension (mm): 115 x 80 x 47



