
Owners Manual

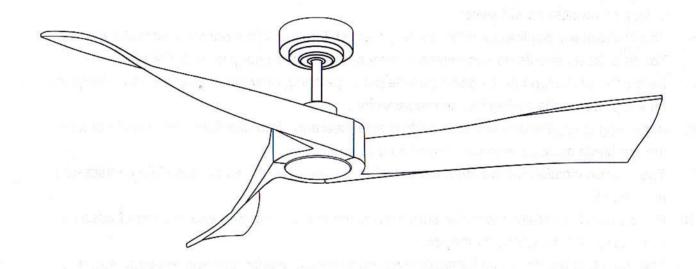

riodic clea en cleani sh. Abrasi vent dam

COMEN rews are

ouble

N WILL N ART

N WOBBI

N SOUNE

READ AND SAVE THESE INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS, PLEASE OBSERVE THE FOLLOWING:


Please observe the following general safety precautions carefully before and during all phases handing, installation, removal, operation and maintenance of this appliance.


- Read all instructions and safety information. Review assembly diagrams provided before installing your new ceiling fan.
- Make sure that all electrical connections comply with local codes, ordinances, or National electrical codes. Hire a qualified electrician or consult a do-it-yourself writing hand book if are unfamiliar with installing electrical wiring.
- All electrical works must only be undertaken after disconnection of the power by removing fuses or turning off the circuit breaker, to ensure all pole isolation of the electrical supply.
- 4. This manual is not intended to instruct or assist untrained or unqualified persons to install ceiling fan. It is the responsibility of qualified, licensed installer and user to apply common sense and care at all times during installation and operation.
- To reduce the risk of electric shock, do not use this fan with any solid-sate speed control device or variable speed switch.
- The appliance is not intended for use by young children or infirm persons without supervised to ensure that they do not play with the appliance.
- Be careful of the fan and blades when cleaning, painting, or working near the fan. Always
 off the power to the ceiling fan before servicing.
- According to regulations and to provide a safe clearance from the floor, the lowest point of the fan blade must be at least 2.3 meters from the floor.
- The chosen location for the fan must not allow the rotating blades to come into contact with any object.
- Please check carefully and make sure that ceiling joists are strong enough and of adequa size to support the weight of the fan.
- 11. The mounting bracket must be firmly screwed to a load bearing building structure e.g. a concrete ceiling, steel structure, or a timber frame. If additional timber frames are to be ad those must be securely nailed or screwed between the beams.
- 12. This fan is to be used in dry location.
- Check and confirm, after the fan is completely installed, that all connections are proper ar secure to prevent the fan from failing or causing properly damages or personal injury.

WARNING: TO REDUCE THE RISK OF SHOCK, THIS FAN MUST BE INSTALLED WITGENERAL USE ISOLATING WALL CONTROL/SWITCH.

warning: This product is designed to use only those parts supplied with this product an accessories designated specifically for use with this product. Using parts and/or accessories redesignated for use with this product could result in personal injury or property damage.


Unpack and inspect fan carefully to be certain all contents are included.

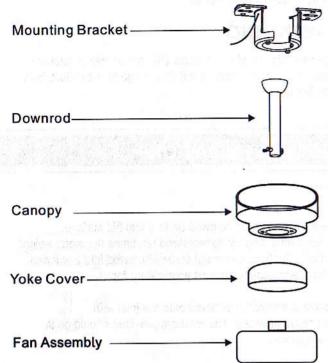


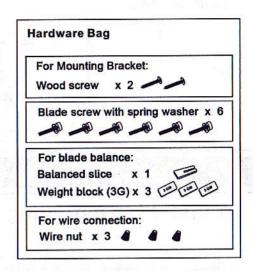

Remote control

Hardware Bag

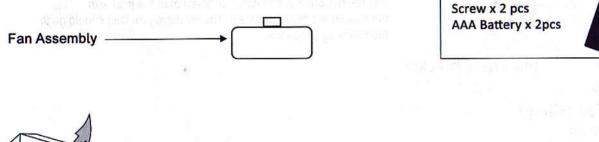

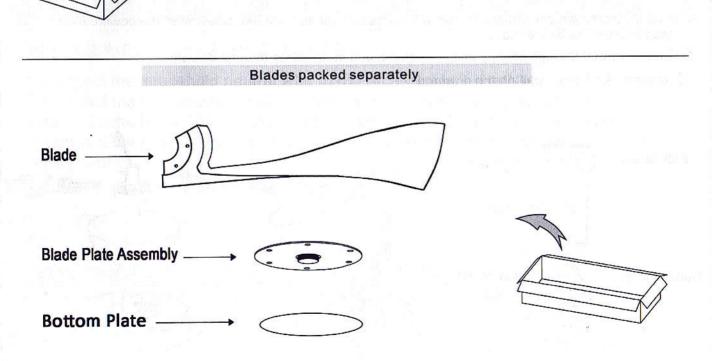

WARNING: blades should be at least 7 feet from floor

Note:

fir


pr

F

F

N

Turn off power at breaker box to avoid possible electrical shock.

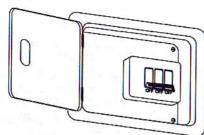

WARNING

To avoid fire or shock, follow all wiring instructions carefully.

Any electrical work not described in these instructions should be d approved by a licensed electrician.


1

WARNING

Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

1. HANGING SYSTEM INSTALLATION

1A.Installing mounting bracket

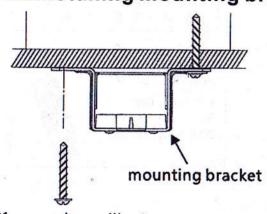

The hanger bracket should be screwed on to a firm flat surface.


The fixing location must be able to withstand ten times the static weigh of the fan. In most situations two wood screws screwed into a wooden joist is more than adequate to support your ceiling fan.


The hanger bracket should be screwed onto the joist with the two wood screws provided. The washers provided should go in the following sequence.

(for wooden ceiling) screws


1B. Installing Downrod and Yoke


- ① Remove cross pin and cotter pin from yoke. Remove the pin and ball screw from the downrod, then remove the hanger ball.
- 2 Inset downrod through canopy and yoke cover, and motor wires through downrod.
- ③ Reinstall the hanger ball on the downrod.

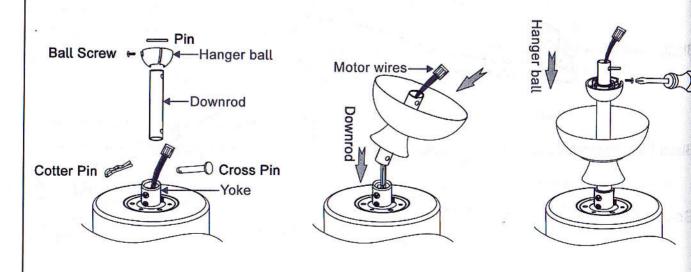




6 Pull down the yoke cover to cover yoke.

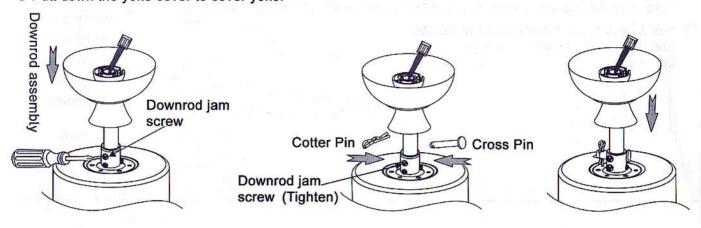




Lift fan assembly onto mounting bracket.

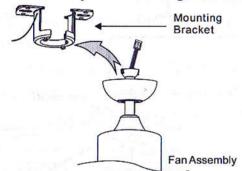


Rotate fan so that the groove on the ball engages the ridge in the mounting bracket.

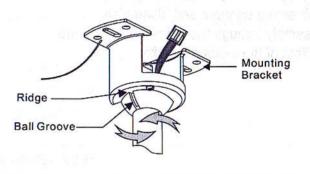

2. WIRE CONNECTION


Making electrical wire connection

- 1. Connect the household neutral wire to the receiver blue wire(N) by wire nut.
- 2. Connect the household live wire to the receiver brown wire(L) by wire nut.
- 3. Connect the household earth wire to the receiver earth wire() by wire nut.
- 4. Connect the receiver output wire and the motor power input wires via the 4-ports quick connectors.
- 5. Insert the receiver into the mounting bracket.

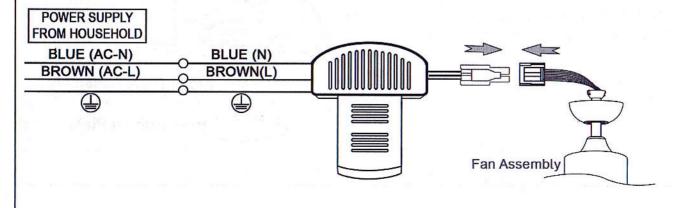


3. CANOPY INSTALLATION

- 1 Loosen 2 screws with hex nut from the bottom of the mounting bracket.
- 2 Slide the canopy up to the mounting bracket and place the key hole on the canopy over the screw on the mounting bracket, turn canopy until it locks in place at the narrow section of the key holes, secure it by tightening the two set screws. Avoid damaging the electrical wiring prepared previously.
- 3 Finally attach the canopy cover to canopy and secure it by pushing the lugs into the holes.

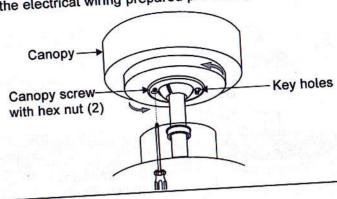

4. BLADE INSTALLATION

Secure the three blades using the screws with spring washers and blade plate assembly through the holes located on the bottom of the motor assembly.

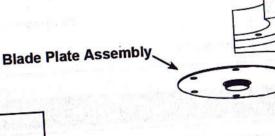


RECOMMENDATION:

Please regularly check that all the blades are properly fastened with blades screws.

5. BOTTOM PLATE INSTALLATION

Position the bottom plate onto the blade plate assembly bottom.

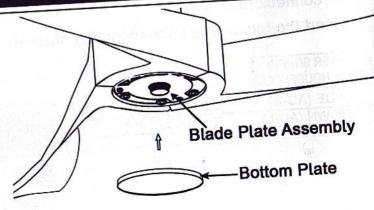

Blade

Srew with

Spring Washer

(2 each per blade)

6. REMOTE CONTROL

6A. FUCNCTION DESCRIPTION

FAN:

- 1. Turn on ceiling fan at 1st speed (lowest speed).
- 2. Turn on ceiling fan at 2nd speed.
- 3. Turn on ceiling fan at 3rd speed.
- 4. Turn on ceiling fan at 4th speed.
- 5. Turn on ceiling fan at 5th speed.
- 6. Turn on ceiling fan at 6th speed(high speed).

U: Turn off ceiling fan.

LIGHT:



LIGHT ON/OFF—Touch this icon and release instantly to turn on or off the light.



Touch icon for forward/reverse airflow of ceiling fan.




Natural breeze: Fan speed will modulate to simulate a natural breeze.

FAN TIMER:

1hr: Setting up that the ceiling fan will turn off after 1 hour automatically.

3hr: Setting up that the ceiling fan will turn off after 3 hours automatically.

6hr: Setting up that the ceiling fan will turn off after 6 hours automatically.

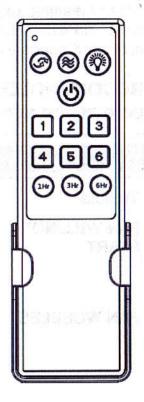

6B. LEARNING PROCESS

NOTE: The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units.

Step: 1. Install 2pcs DC1.5V/AAA batteries in transmitter. Within 30 seconds of turning the Receiver AC power ON, press the transmitter "U" button.

Step: 2. Press **b** about 5 seconds, once the receiver has detected the ID, the receiver will make sound Bi Bi three times. This will indicate the receiver has learned the ID that was previously selected on the transmitter.

Note: After the AC power is on, do not press any other buttons on the transmitter before touching button. Because doing so will cause the procedure to fail. After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.

Note: Remove the battery if not used for long periods of time to prevent damage to the hand held remote.



7. Maintenance

Periodic cleaning of your new ceiling fan is the only maintenance that is needed. When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish. Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.



RECOMENDED: Periodically check that the blade screws to motor hub screws are secure and tight.

	100	100	_			
8. T	rai	ihle	3 4	ho.	otu	α
O .	IUL	$\mathbf{I} \cup \mathbf{I} \mathbf{I}$	\mathbf{z}	IIU		IQ.

Trouble	Solution			
FAN WILL NOT START	 Check main and branch circuit fuses or circuit breakers. Check line wire connections to fan and switch wire connections in the switch housings. CAUTION: Make sure main power is turned off! 			
FAN WOBBLES	 Tighten both setscrews securely in downrod support. Tighten the setscrew in the downrod/ hanger ball assembly. Check to make sure the screws which attach the fan blade to the motor assembly are tight. Tighten the hanger bracket screws to the timber batten, and secure outlet box. Use the balancing kit supplied. 			
FAN SOUNDS NOISY	 Attach blades to fan before operating. Check to make sure all screws in motor housing are snug (not overtight). Check to make sure the screws which attach the fan blade to the motor assembly are tight. CAUTION: Make sure main power is turned off! Tighten set screw securely. 			